

Nissan Primera P12, kombi

Rok prod: 2002-2008

Zestaw śrubowy:

Śruby:		
M12X70-8.8	- 2 szt.	
M10x40-8.8	- 11 szt.	
Podkładki:		
Ø13	- 2 szt.	
Ø10,5	- 11 szt.	
Ø10,5xØ30	- 1 szt.	
Podkładki spręż.:		
Ø12,2	- 2 szt.	
Ø10,2	- 11 szt.	
Nakrętki:		
M12-8	- 2 szt.	
M10-8	- 1 szt.	

Instrukcja montażu:


(demonтаж zderzaka, i jego podcięcie)

1. Zdemoncować tylne lampy oświetlenia i zderzak.
2. Opuścić tłumnik i zdemontować osłonę termiczną.
3. Zdemontować wspornik z lewej strony przykręcony do podłużnicy.
4. Wsunąć belkę haka A do podłużnicy i przykręcić śrubami M10x40 (podkładki i podkładki sprężyste) , na ostatnią śrubę z prawej strony nakręcić nakrętkę (podkładka, podkładka powiększona, podkl. sprężysta) .
5. Dokęcić wszystkie śruby momentami wg tabeli.
6. Zamontować osłonę termiczną i podwiesić tłumnik.
7. Wyciąć zderzak od dolnej krawędzi na wysokość ok. 55 mm - pod łapki kuli.
8. Zamontować zderzak.
9. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12X70 (podkładki, podkładki sprężyste, nakrętki) . Momenty dokręcenia wg tabeli.
10. Podłączyć instalację elektryczną wg instrukcji fabrycznej samochodu.

Fitting instructions:

(disassembly of the bumper, and its undercutting)

1. Disassemble the rear lighting lamps and the bumper.
2. Lower the muffler and disassemble the head shield.
3. Remove the left hand side bracket bolted to the stringer.
4. Slide the main beam A to the side stringers and fix it with the bolts M10x40 (washers, spring washers), on the first bolt on the right side screw the nut (washer, enlarged washer, spring washer).
5. Tighten all bolts according to the table torque.
6. Install the heat shield and hang the muffler.
7. Cut out the bumper from the bottom edge to a length of about 55 mm - under the ball feet.
8. Reassemble the bumper.
9. Fix the ball and the electric plate with M12X70 screws (washers, spring washers, nuts). Tightening torques according to table.
10. Connect the electrical installation according to the car's factory instructions.

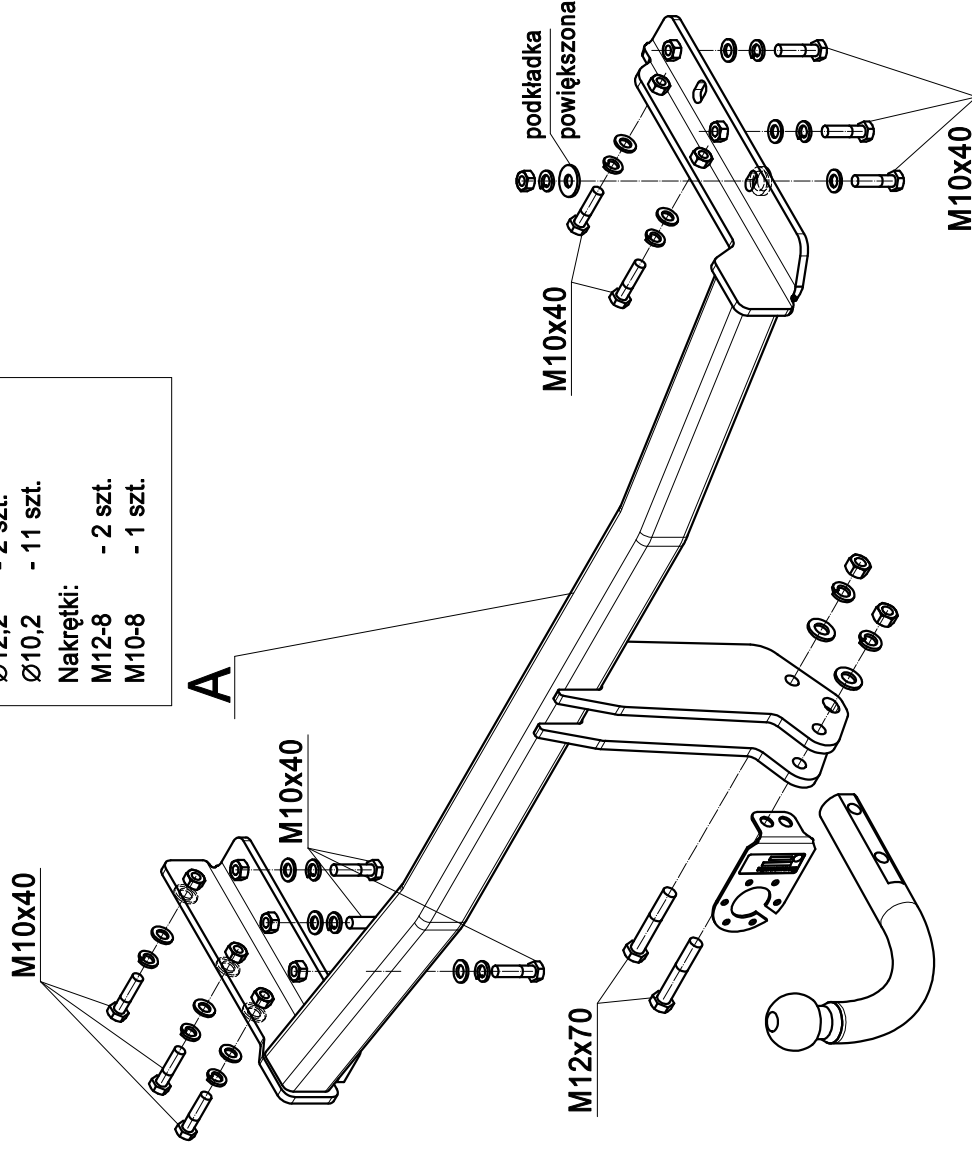

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm

Nissan Primera P12, kombi

Rok prod: 2002-2008

Zestaw śrubowy:

Śruby:		
M12X70-8.8	- 2 szt.	
M10x40-8.8	- 11 szt.	
Podkładki:		
Ø13	- 2 szt.	
Ø10,5	- 11 szt.	
Ø10,5xØ30	- 1 szt.	
Podkładki spręż.:		
Ø12,2	- 2 szt.	
Ø10,2	- 11 szt.	
Nakrętki:		
M12-8	- 2 szt.	
M10-8	- 1 szt.	

Instrukcja montażu:


(demonтаж zderzaka, i jego podcięcie)

1. Zdemontować tylne lampy oświetlenia i zderzak.
2. Opuścić tłumnik i zdemontować osłonę termiczną.
3. Zdemontować wspornik z lewej strony przykręcony do podłużnicy.
4. Wsunąć belkę haka A do podłużnicy i przykręcić śrubami M10x40 (podkładki i podkładki sprężyste) , na ostatnią śrubę z prawej strony nakręcić nakrętkę (podkładka, podkładka powiększona, podkl. sprężysta) .
5. Dokęcić wszystkie śruby momentami wg tabeli.
6. Zamontować osłonę termiczną i podwiesić tłumnik.
7. Wyciąć zderzak od dolnej krawędzi na wysokość ok. 55 mm - pod łapki kuli.
8. Zamontować zderzak.
9. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12X70 (podkładki, podkładki sprężyste, nakrętki) . Momenty dokręcenia wg tabeli.
10. Podłączyć instalację elektryczną wg instrukcji fabrycznej samochodu.

Fitting instructions:

(disassembly of the bumper, and its undercutting)

1. Disassemble the rear lighting lamps and the bumper.
2. Lower the muffler and disassemble the head shield.
3. Remove the left hand side bracket bolted to the stringer.
4. Slide the main beam A to the side stringers and fix it with the bolts M10x40 (washers, spring washers), on the first bolt on the right side screw the nut (washer, enlarged washer, spring washer).
5. Tighten all bolts according to the table torque.
6. Install the heat shield and hang the muffler.
7. Cut out the bumper from the bottom edge to a length of about 55 mm - under the ball feet.
8. Reassemble the bumper.
9. Fix the ball and the electric plate with M12X70 screws (washers, spring washers, nuts). Tightening torques according to table.
10. Connect the electrical installation according to the car's factory instructions.

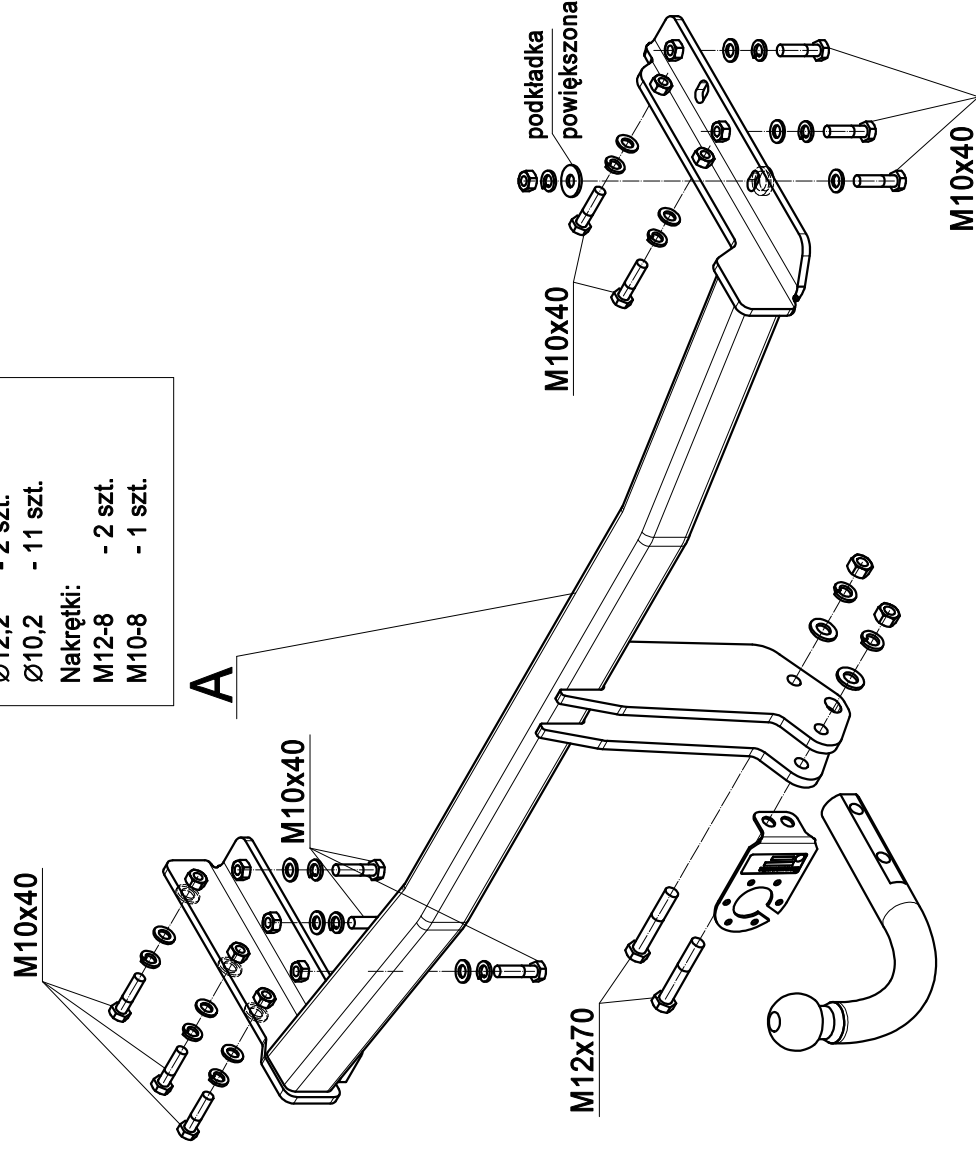

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm