

# Renault Clio IV Grandtour (kombi, oprócz GT)

Rok prod: 03.2013-07.2016 i od 08.2016

## Instrukcja montażu:

(bez demontażu i podcinania zderzaka)

1. Opuścić koło zapasowe .
2. Zdjąć plastikową osłonę i opuścić tłumnik.
3. Zdjąć osłonę termiczną nad tłumnikiem.
4. Odchylić osłony przy nadkolach blokujące dostęp do otworów w podłużnicach.
5. Od zewnętrznych stron podłużnic w otworach montażowych umieścić z lewej strony : tulejki l=69mm B wraz ze śrubami M10x100, z prawej strony : tulejki l=63mm C wraz ze śrubami M10x90 oraz podkładki powiększone. Od wewnętrznych stron nałożyć wsporniki D i E, podkładki powiększone, podkładki sprężyste i skręcić nakrętkami.
6. Do wsporników D, E przykręcić belkę główną A śrubami M12x35 (podkładki, podkładki sprężyste, nakrętki).
7. Przykręcić wszystkie śruby momentami wg tabeli.
8. Przykręcić osłonę w nadkolach, osłonę termiczną, tłumnik i plastikową osłonę .
9. Zawiesić koło zapasowe.
10. Zamontować kulę oraz blachę gniazda elektrycznego stosując śruby M12x70 (podkładki, podkładki sprężyste, nakrętki). Momenty wg tabeli.
11. Podłączyć instalację elektryczną wg instrukcji fabrycznej samochodu.

## Fitting instructions:

(without disassembly and undercutting the bumper)

1. Lower the spare wheel.
2. Unscrew the plastic cover and lower the silencer.
3. Remove the heat shield over the silencer.
4. Tilt the covers at the wheel arches blocking access to the holes in the stringers.
5. Place from the external sides of the stringers in the mounting holes on the left side: sleeves l=69mm B together with bolts M10x100, on the right side: sleeves l=63mm C together with bolts M10x90 and the enlarged washers. Put the supports D, E on protruding bolts from the internal sides of the stringers and screw with the use of nuts (enlarged washers, spring washers).
6. Insert the towbar mainframe A between installed supports D, E and screw using bolts M12x35 (washers, spring washers, nuts).
7. Tighten all the bolts according to the torque settings - see the table.
8. Screw the cover in the wheel arches, heat shield, muffler and plastic cover
9. Hang the spare wheel.
10. Fix the ball and electric plate with bolts M12x70 (washers, spring washers, nuts). Torque setting according to the table.
11. Connect the electric wires according to the instructions of the car.

6 0 2 0 6

## Śruby:

M12x70-8.8 - 2 szt.  
M12x35-8.8 - 4 szt.  
M10x100-8.8 - 2 szt.  
M10x90-8.8 - 2 szt.

## Podkładki:


Ø13 - 6 szt.  
Ø10.5xØ30 - 8 szt.  
Ø12,2 - 6 szt.  
Ø10,2 - 4 szt.

## Nakrętki:

M12-8 - 4 szt.  
M10-8 - 4 szt.

## Tulejki:

Ø22x~Ø14x69 - 2 szt.  
Ø22x~Ø14x63 - 2 szt..

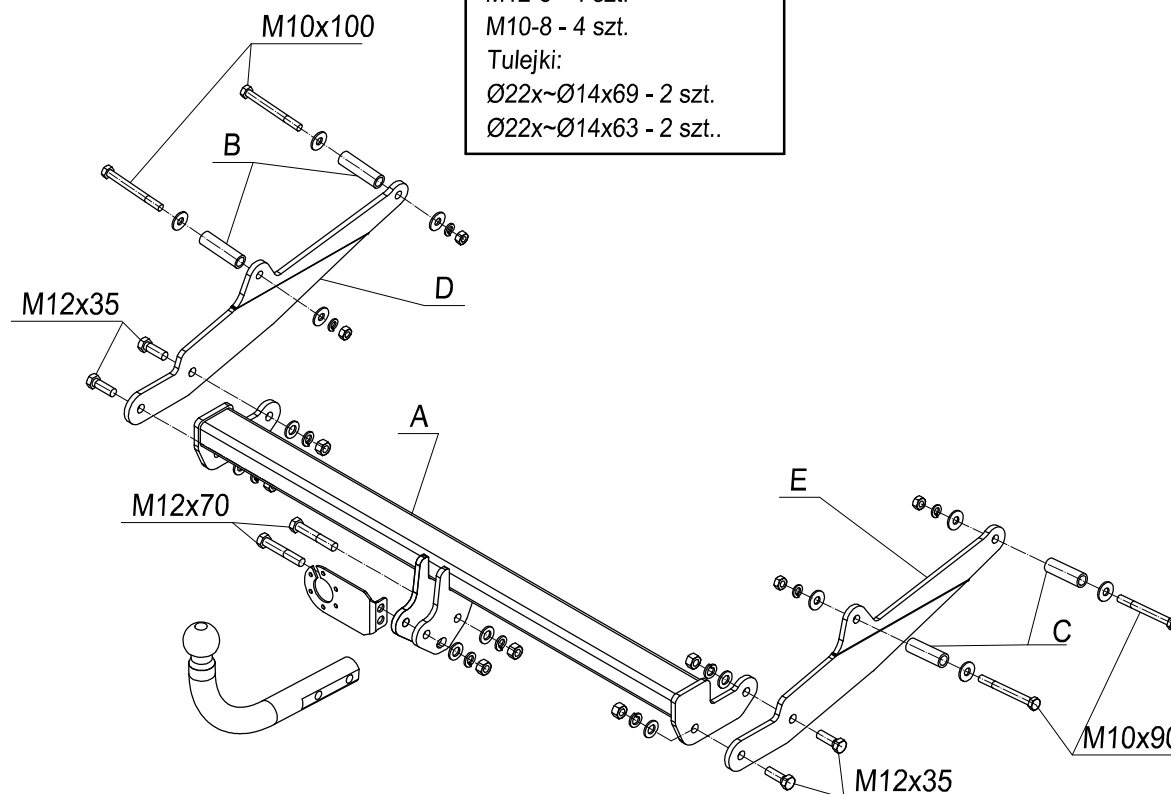

Momenty przykręcenia nakrętek i śrub (8.8)  
Torque settings for nuts and bolts (8.8)  
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm